

WINTERIZATION INSTRUCTIONS

STORE INDOORS



MODELS:

- PV2-82C
- PV2-42C
- PMIII-82PV
- PSII-48PV

- ✓ Turn off PuraVida system and pump
- ✓ Unscrew unions to disconnect plumbing
- ✓ Remove drain plug (wrench required)*
- ✓ Tilt unit to drain water
- ✓ Keeping unit assembled, move chamber and controller indoors for winter. Controller/ballast can be disconnected from bulb**

*inspect zinc anode when winterizing (or annually). it should be replaced when it has reduced to ½". (Original size is 1")

**Entire unit must be stored indoors to keep warranty valid.